



Montageanleitungen










Fine


DE610FIN

Werkzeuge

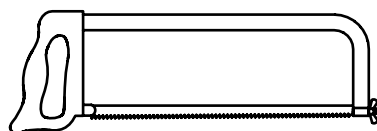


Bauteile

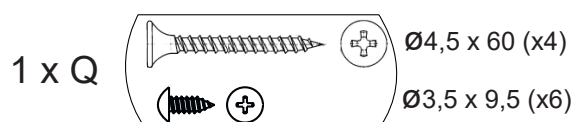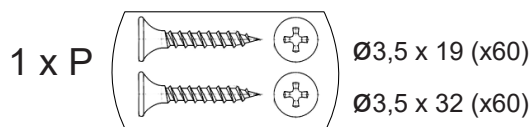

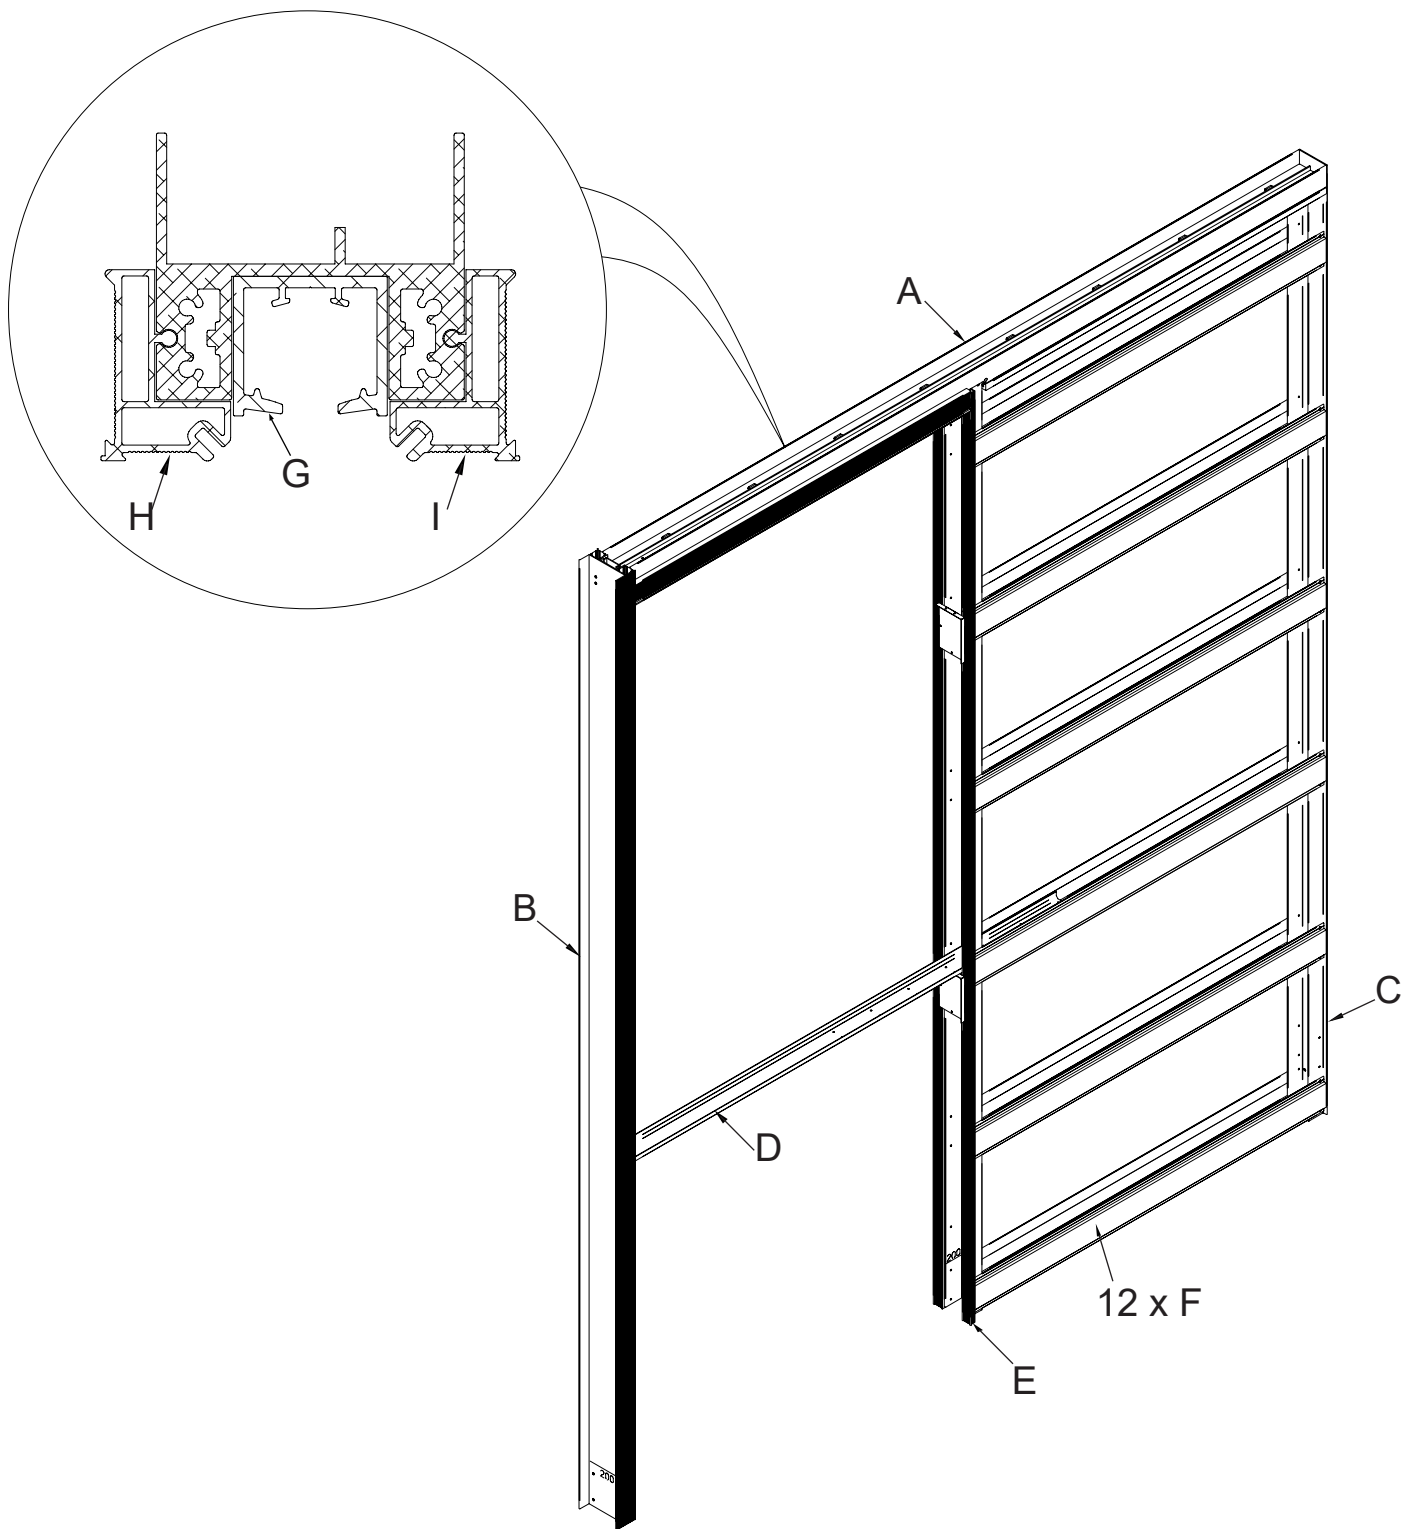

1) Höhenabkürzung 2110 mm

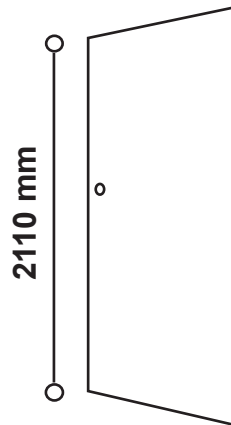


B	•• ••	198,5	•• ••
---	--	-------	-----------------------------


$$C \quad \begin{array}{|c|} \hline \begin{array}{c} \bullet \bullet \\ \bullet \bullet \end{array} \\ \hline \end{array} \quad \begin{array}{|c|} \hline 198.5 \\ \hline \end{array} \quad \begin{array}{|c|c|} \hline \bullet & \bullet \\ \hline \bullet & \bullet \end{array}$$

[illegible]


Höhenabkürzung 1985 mm

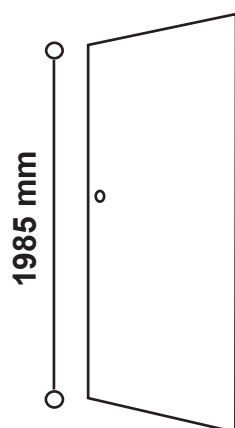

B

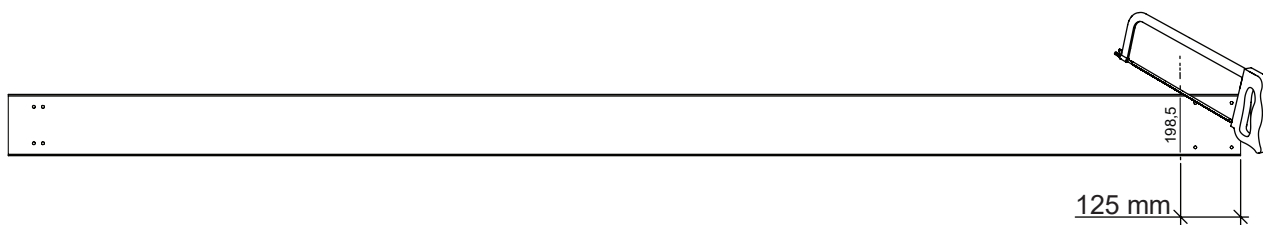


C

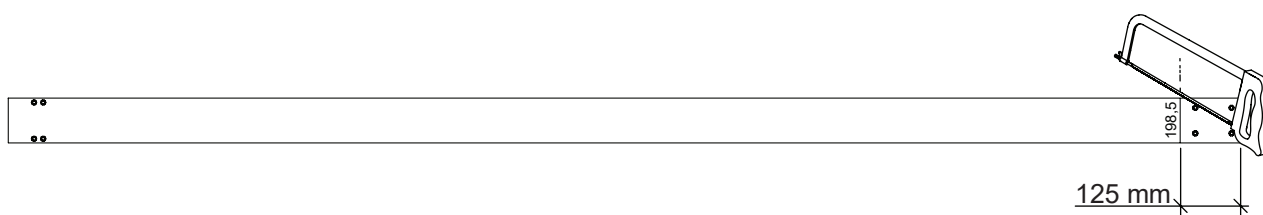


E




2)

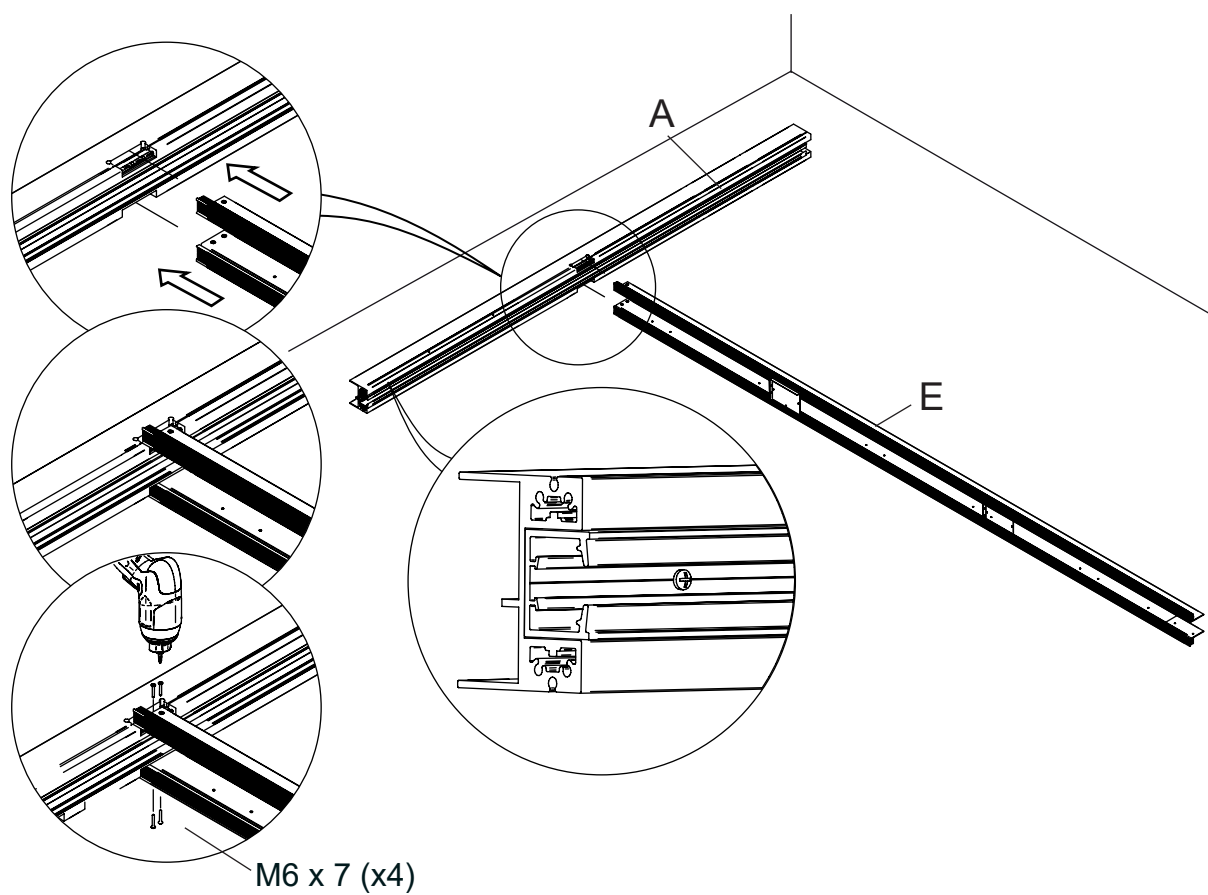


3)

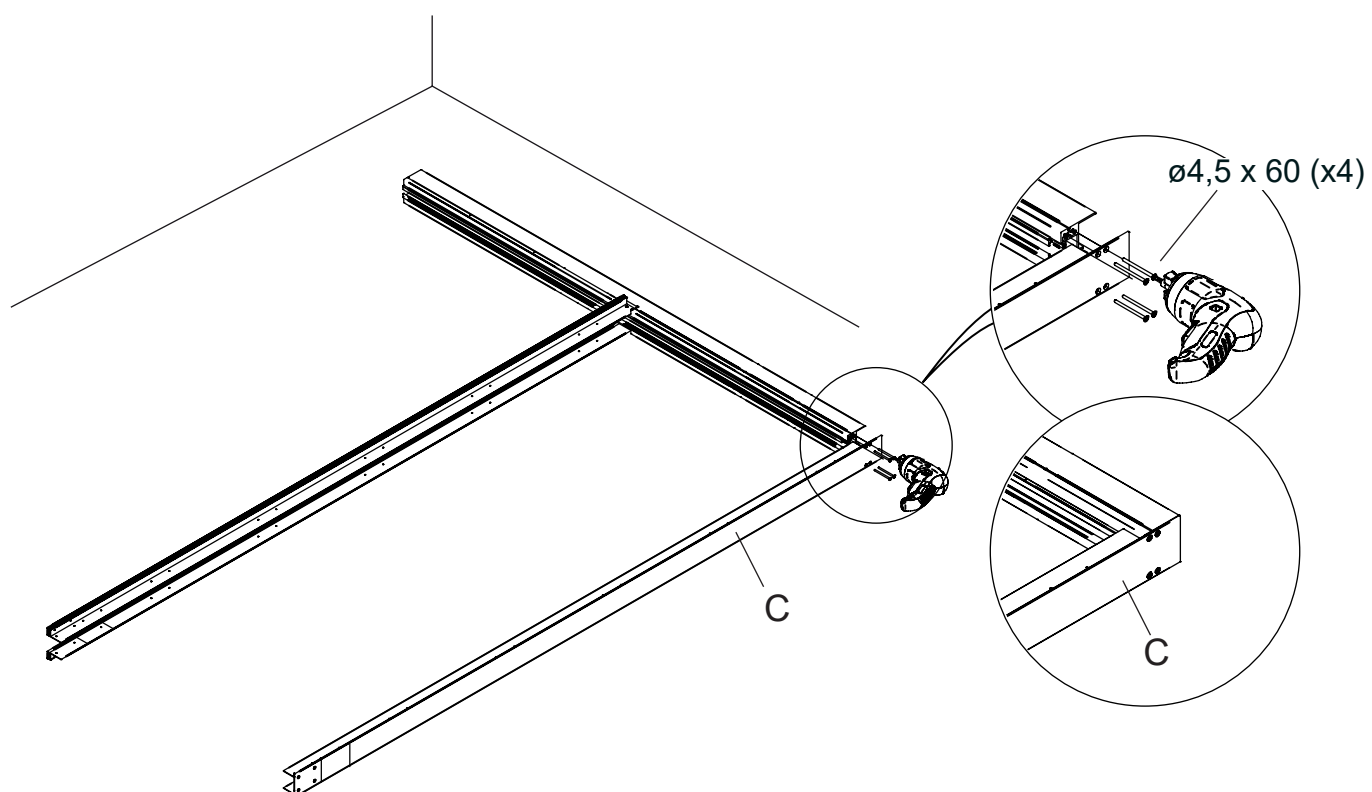


4)

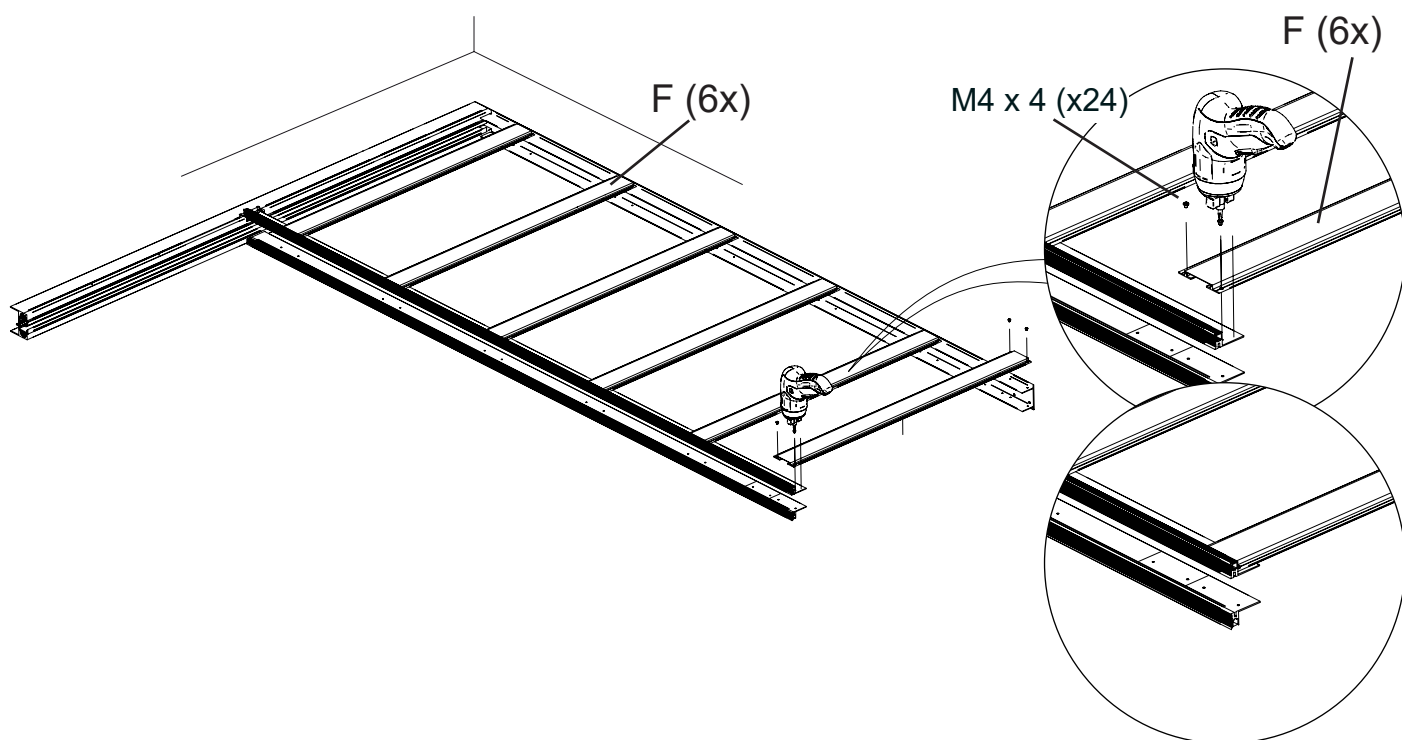


5)

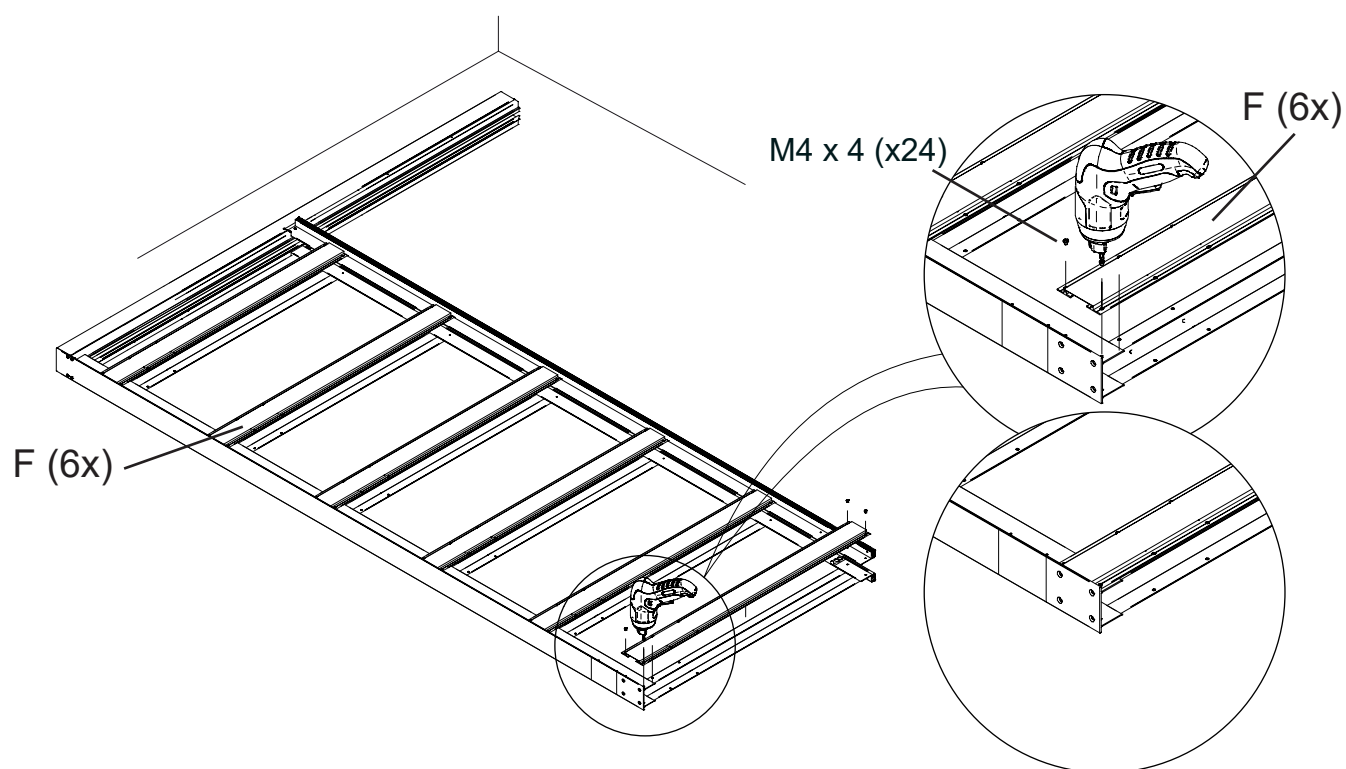


6)

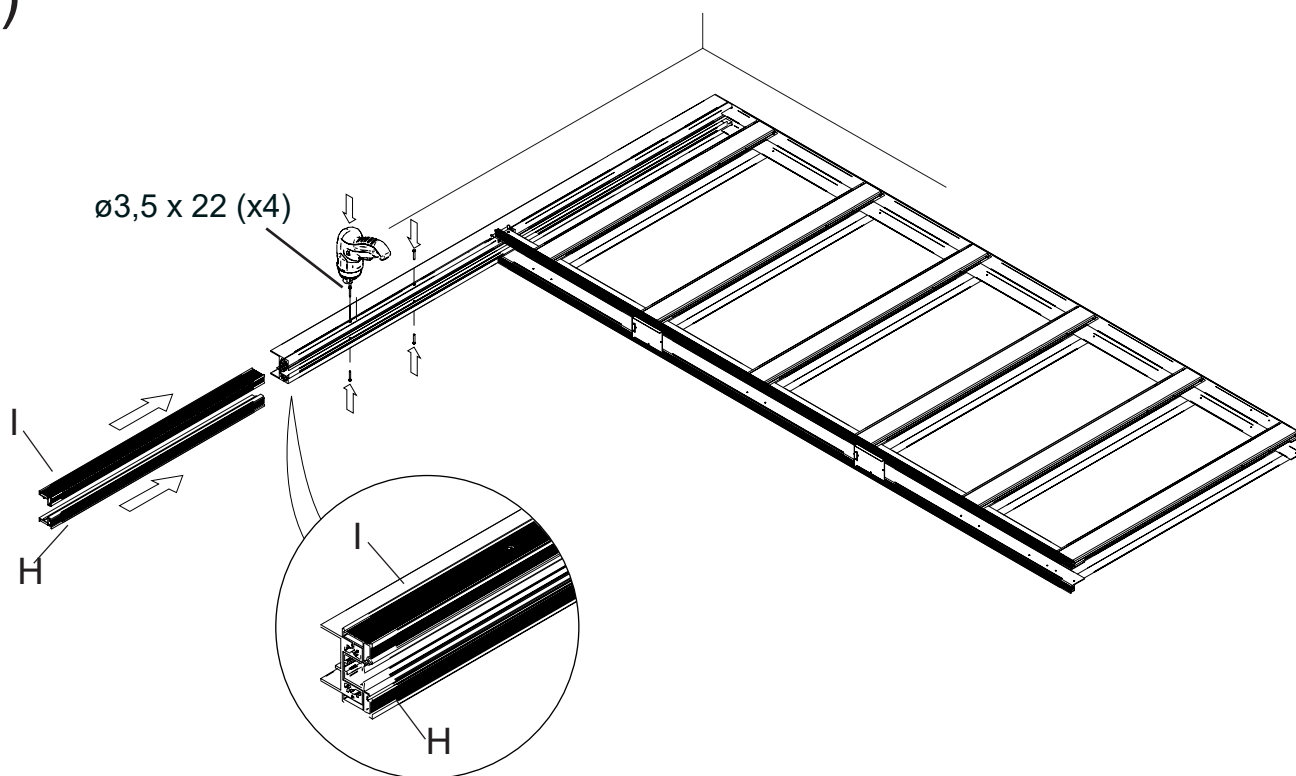


7)

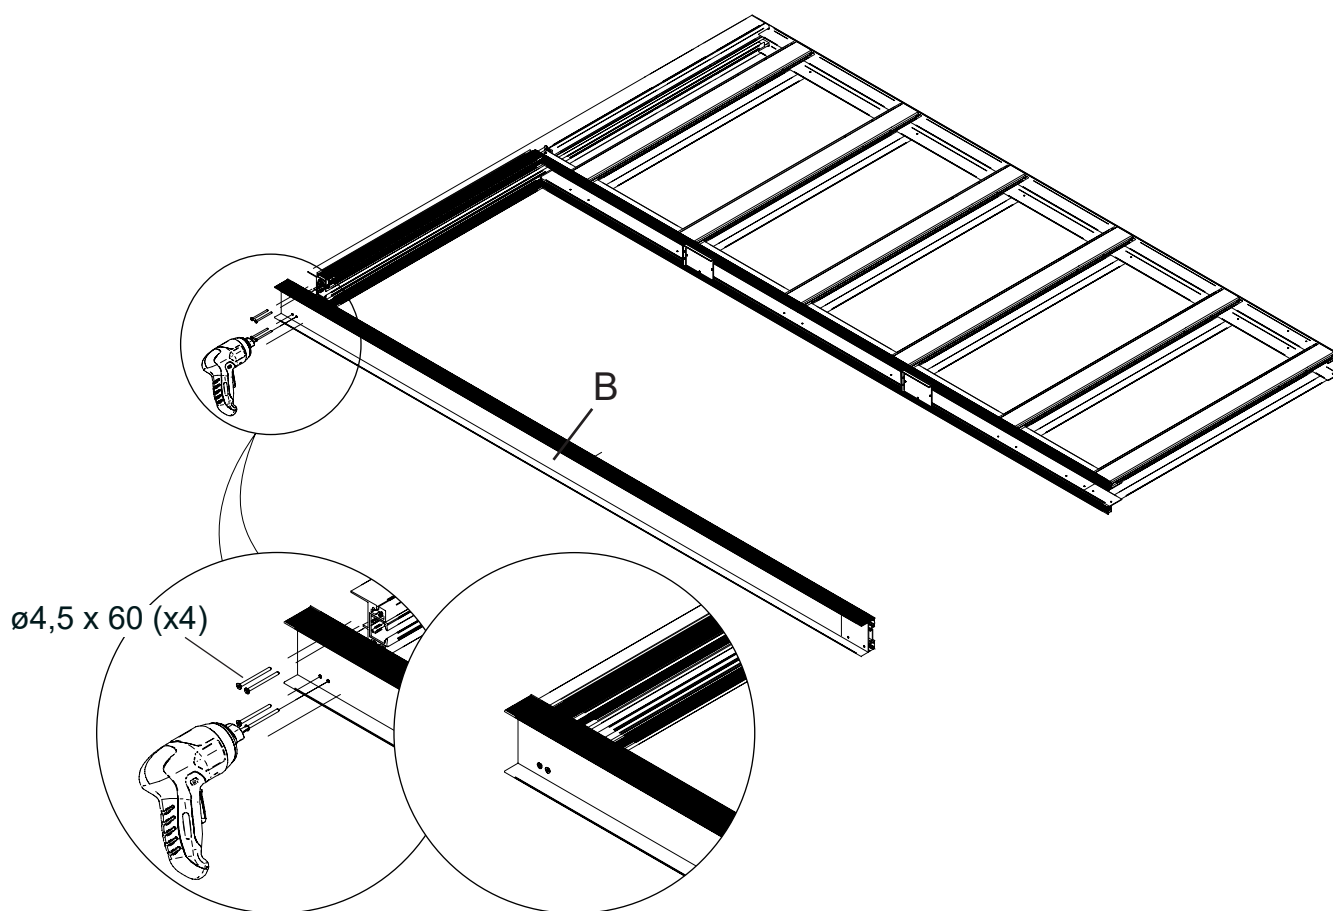


8)

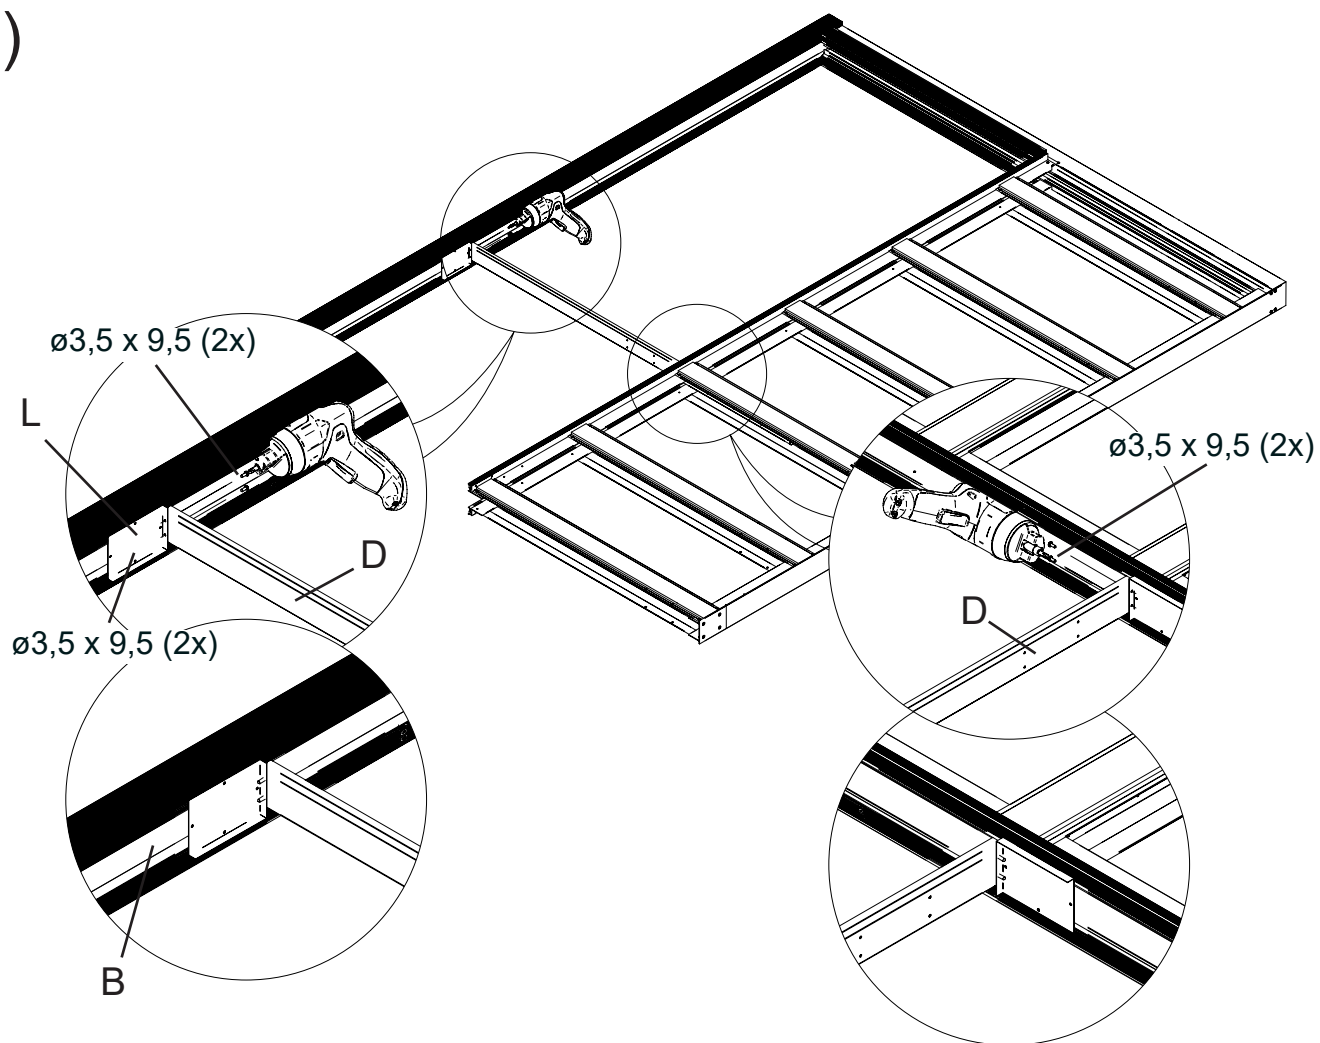


9)

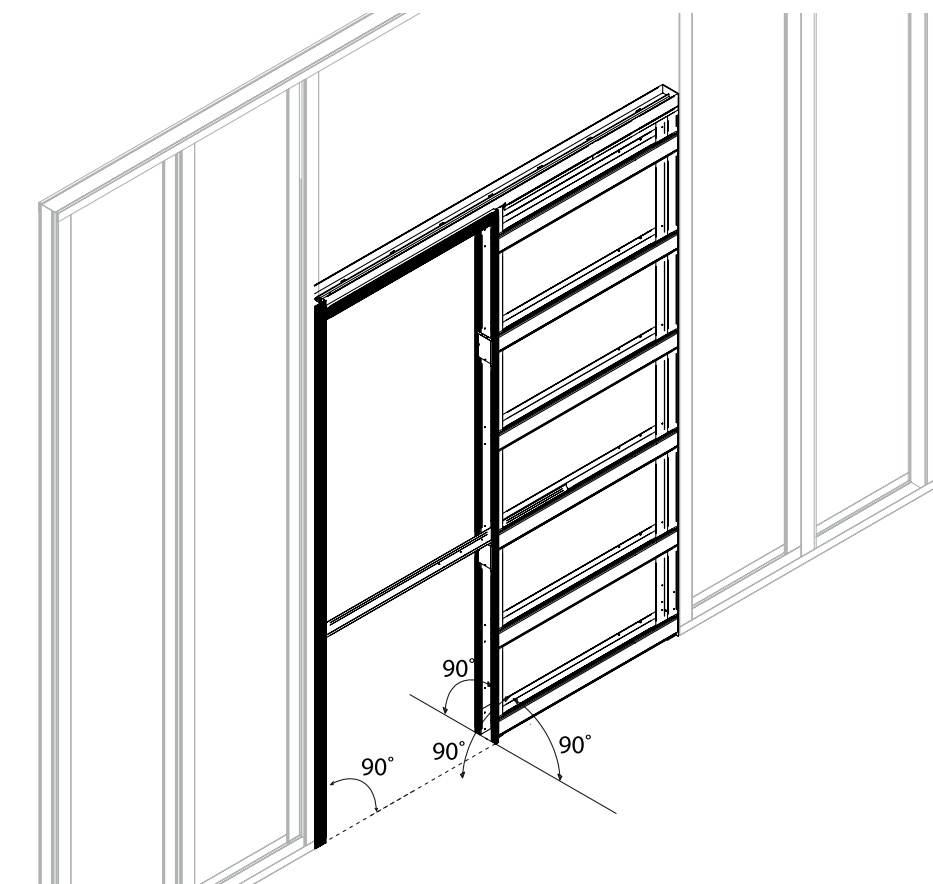

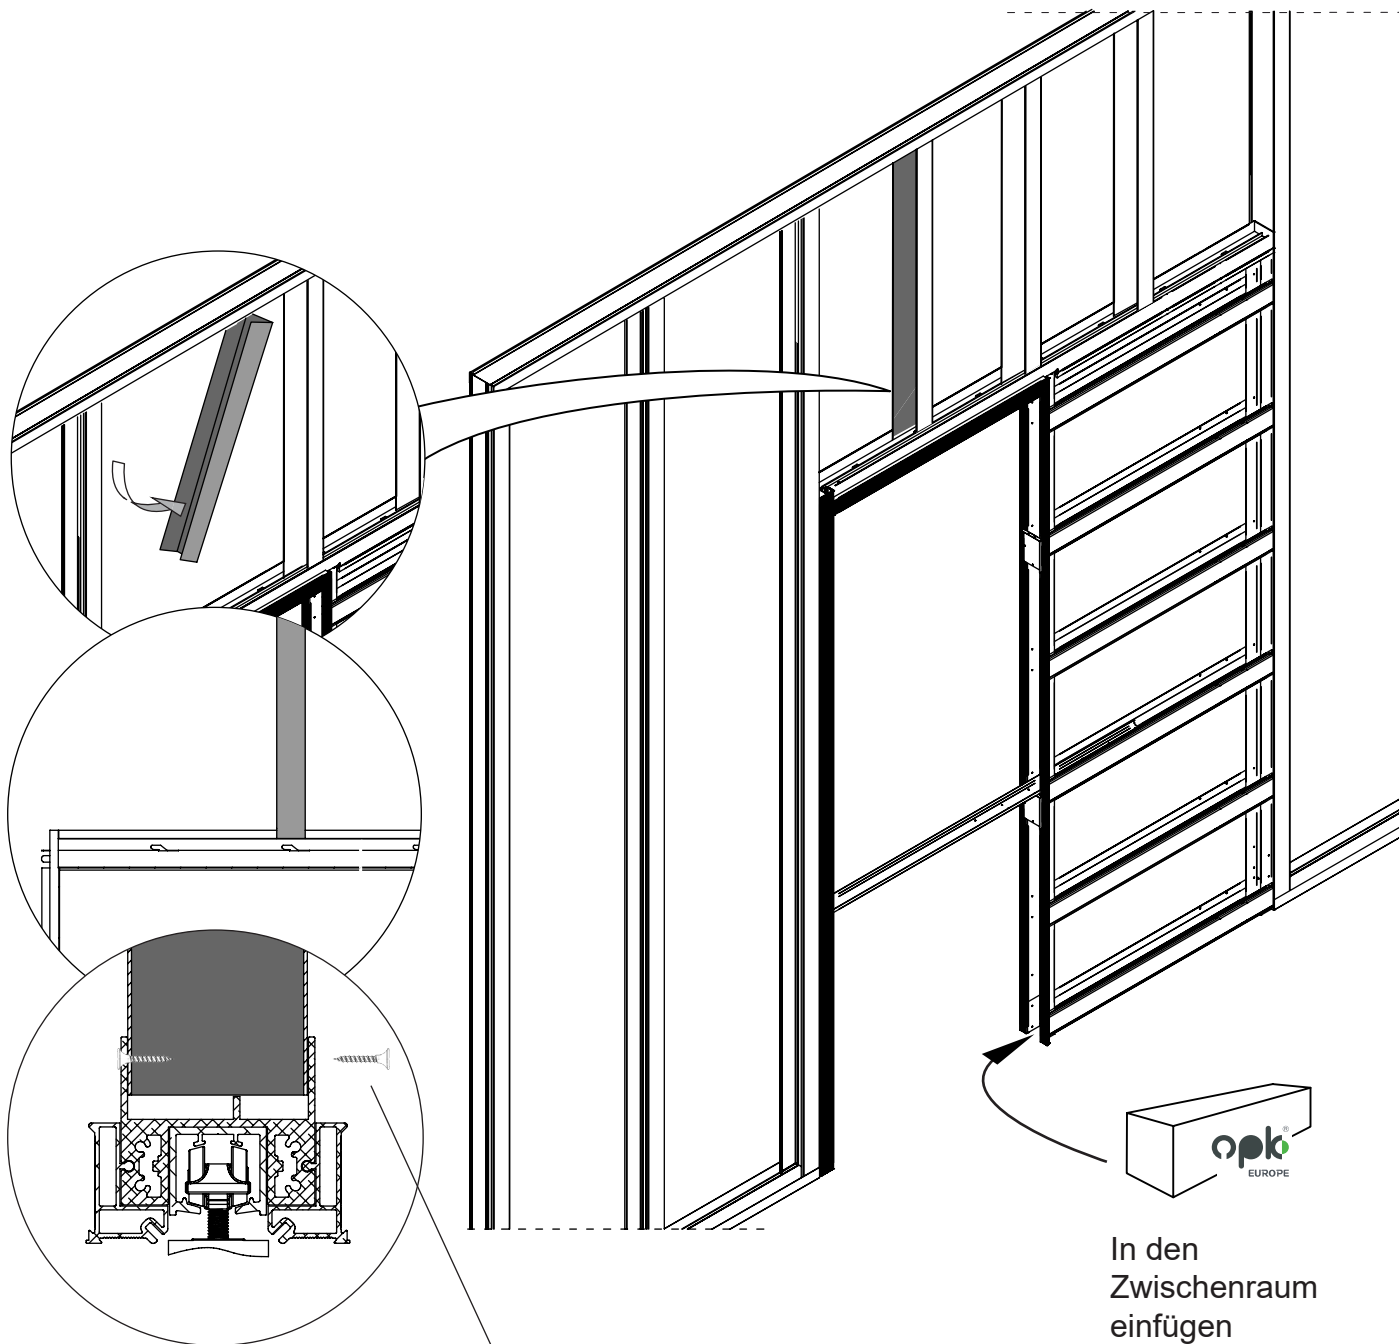

Schrauben nicht
geliefert

In den
Zwischenraum
einfügen

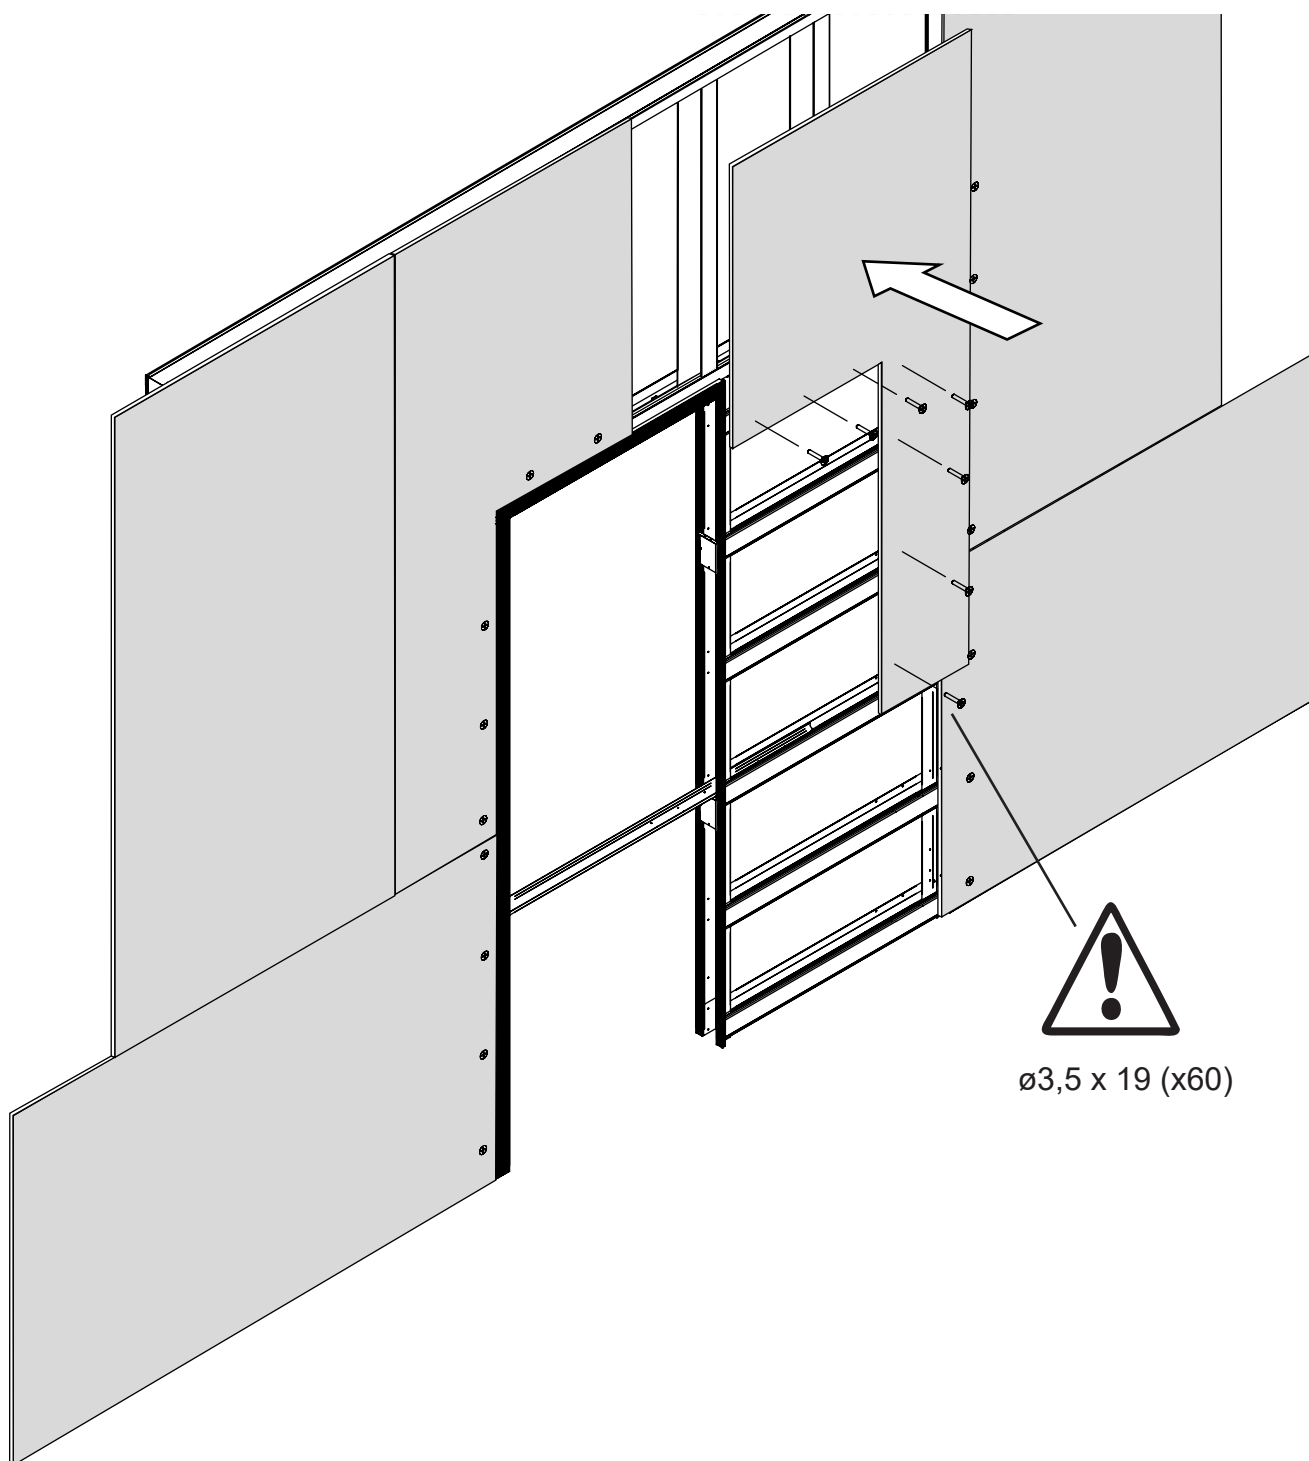

10)

