

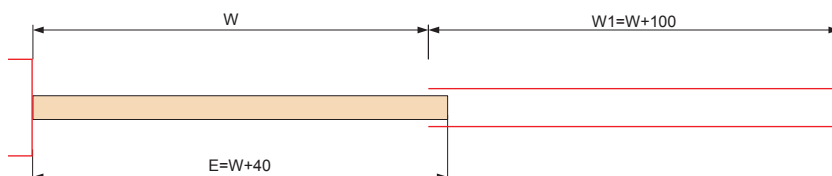
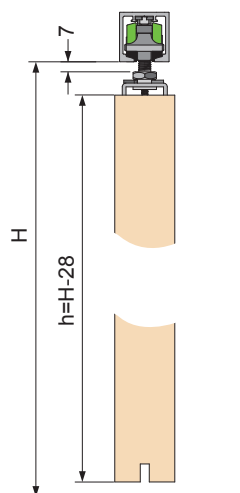
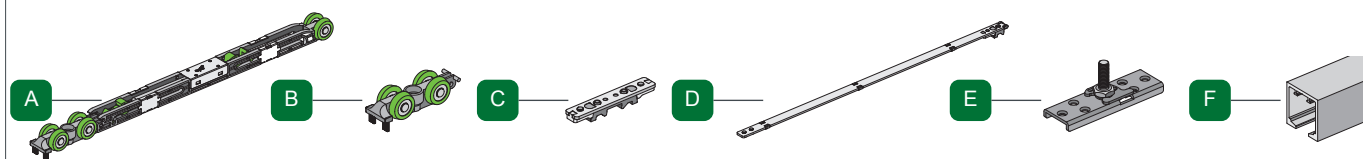



Promani Spaceship 11 Pocket Door Wooden Door Mounting Instruction

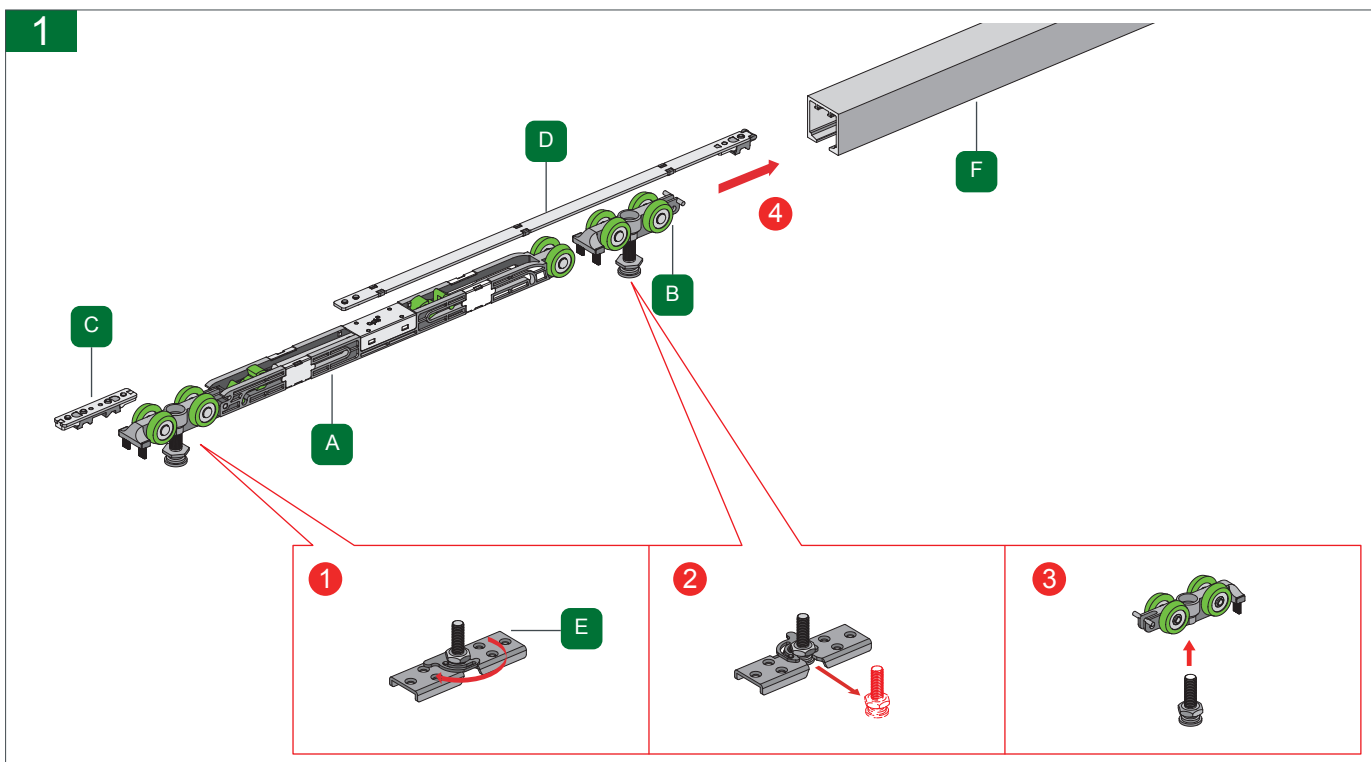


Both side damping

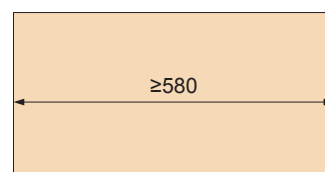


2

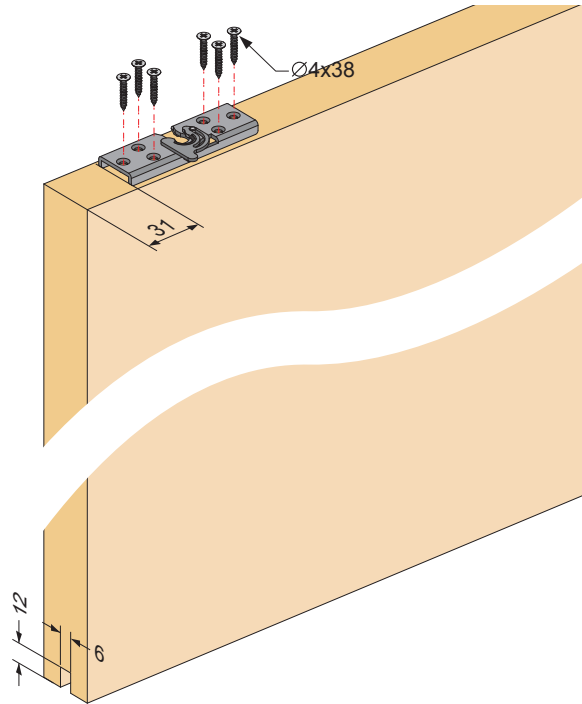

3

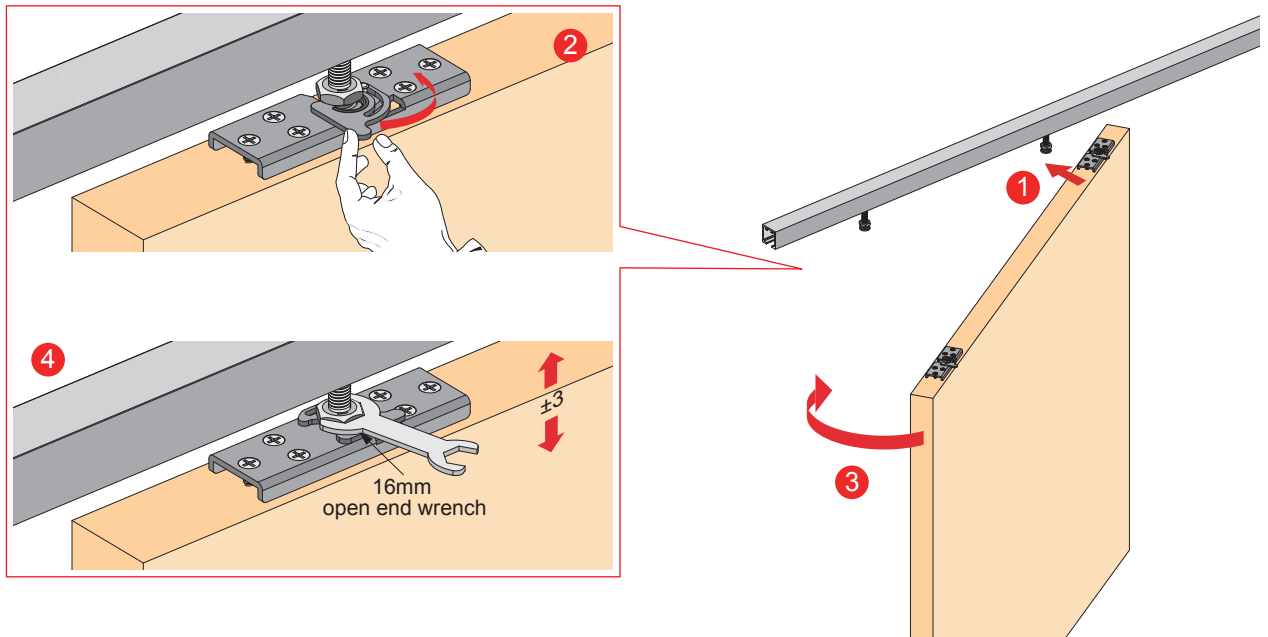

4

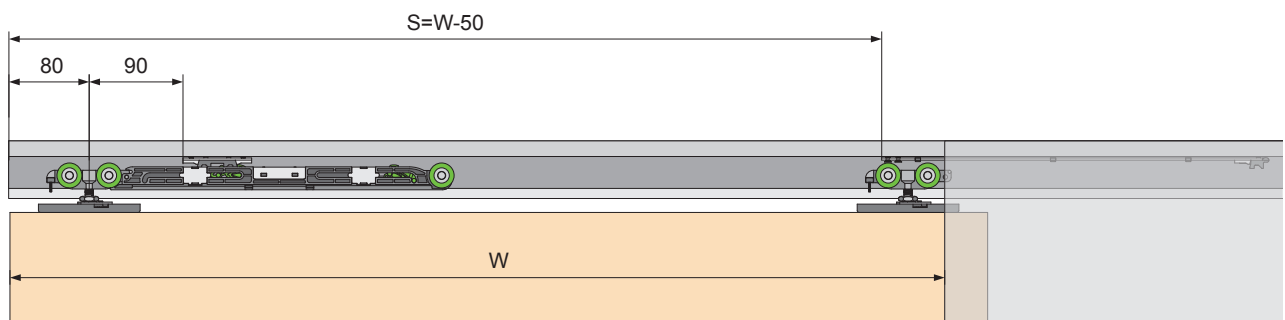

5

